




Jasmine

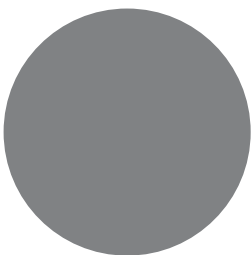


Battleship

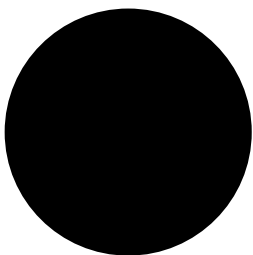


Cobalt

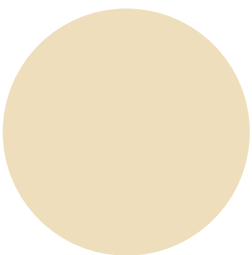


Almond

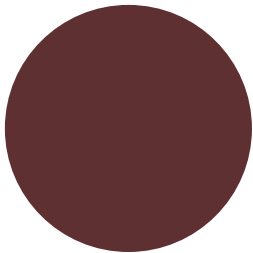


Mulled Wine

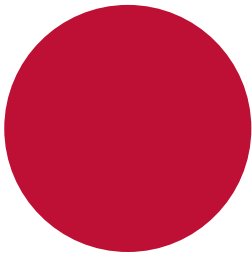


Pillarbox

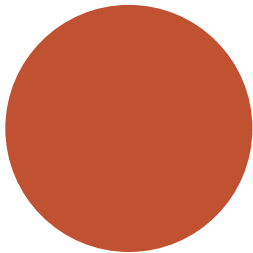


Gingersnap

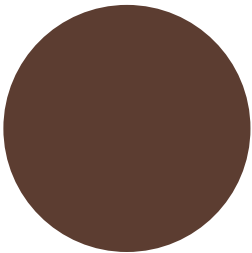


Cocoa

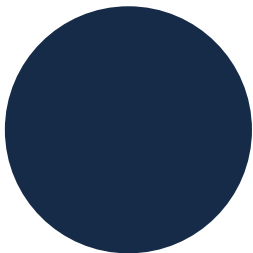


Sapphire

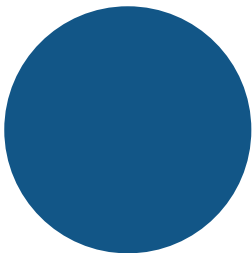


Atlantic Blue

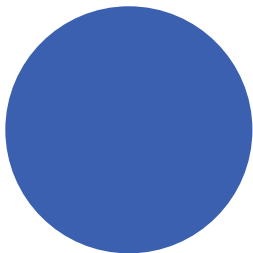


Lupin

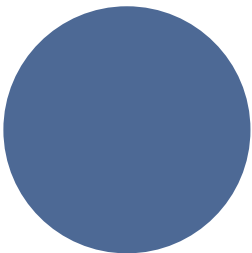


Denim

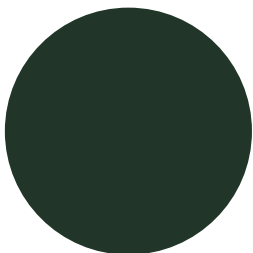


Rainforest

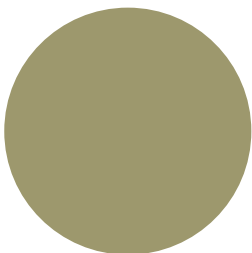


Wasabi

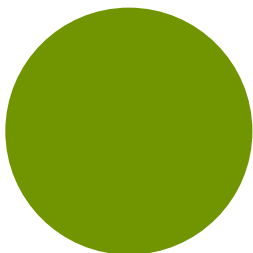


Citrus Green

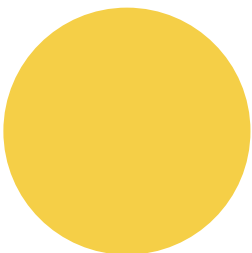


Marigold

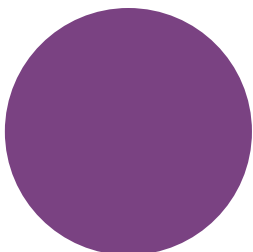


Grape

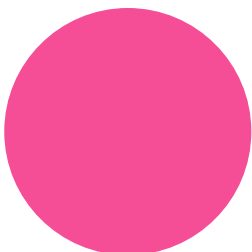

Candy

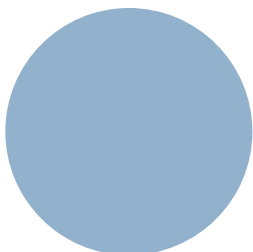

Cool Blue

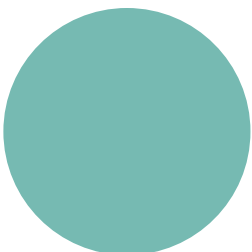

Applemint



Just Colour Vinyl from

chieftainfabrics

Composition:	Surface: Phthalate free PVC Backing: Organic Cotton / rPES
Total weight:	705g/m ²
Thickness:	1.10mm
Martindale Abrasion Rating:	1,000,000 Rubs
Bursting Strength:	1,200+kPa
Flame Retardancy:	BS5852 Ignition Source 5 - CRIB 5 as standard, S.I. 1988 No 1324 Schedule 4 and 5, BS EN1021-1 and 2, CS-25, FMVSS 302, IMO FTP Code 2010 Part 8, NF P 92 503, M2 and B2
Antimicrobial:	Sanitised ISO 22196
Cleaning Instructions:	<p>Wipe clean regularly with a microfiber cloth and warm soapy water to remove dust particles and light soiling. Dry after cleaning.</p> <p>If spillages occur, remove promptly with an absorbent dry cloth. Where disinfection is necessary, bleach based disinfectants such as Chlor-Clean, Haz-Tab, Milton and Tristel are safe to use with a damp cloth, following the manufacturers' instructions.</p> <p>When using bleach, a 5% solution (50,000 ppm) is acceptable.</p> <p>Please Note:</p> <ul style="list-style-type: none">• The use of solvents, abrasives, synthetic detergents, wax polishes, leather cleaner or aerosol spray is not recommended. Do not machine wash or dry clean vinyl fabric.• Do not use felt tip or ballpoint pen to mark, as this will cause permanent staining.• Remove indigo dye from denim and canvas garments immediately as they will produce permanent staining if not dealt with promptly.• Pollution by oil, fat and ink must be removed immediately. Contact with oil and/or lipids is not recommended and will compromise the fabric by removing the lacquer layer. <p>Using cleaning products contrary to these instructions may compromise the integrity of the fabric. Unsuitable cleaning products will remove the lacquer layer which protects the vinyl fabric and result in hardening and/or cracking of the fabric.</p>
Colour Matching:	Slight variations in shade may occur within normal commercial tolerance. Sample cuttings from the current stock shades can be obtained on request.

Plinth Medical Ltd.
Barric Lane
Occold
Eye
Suffolk, IP23 7PX

t: +44 (0) 1449 767887
e: sales@plinthmedical.com
www.plinthmedical.com

Plinth | Medical

